PLEATED FLY SCREEN INSTALLATION INSTRUCTIONS

Assemble the screen flat on the floor then fix to the door frame prior to fitting the architraves. **The full face of the frame must be accessible for the screen to fit correctly. Standard screens will not fit recessed doors or in any instance where the door or window frame is fully or partially covered.** The flatter track is the bottom (floor) the larger track is the top (on windows the top & bottom track are the same). The fly screen cartridge slides into the top track, the bottom screen cartridge clicks into the track. Once fully assembled flat, carefully lift the screen and frame up to the door, at the top it simply screws to the outside of the frame and at the bottom it can be fixed to the floor, or attached the outside of the door frame using double sided tape.

Lie the fly screens flat on the floor being careful Not to tangle cords. The flatter track is the bottom Floor track.

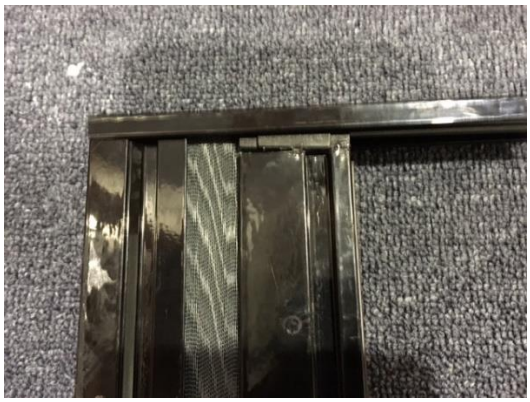

The screen cartridge simply clicks into the bottom track.

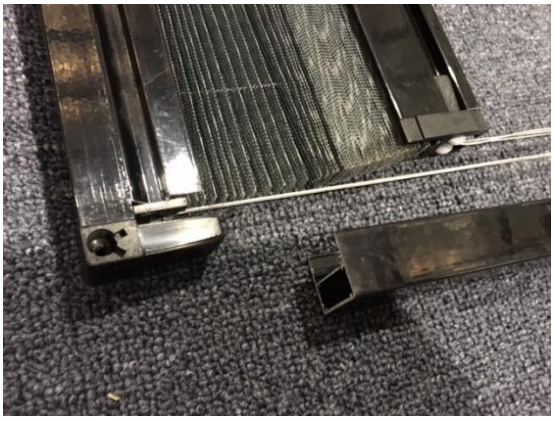

The screen cartridge slides into the top squarer track.

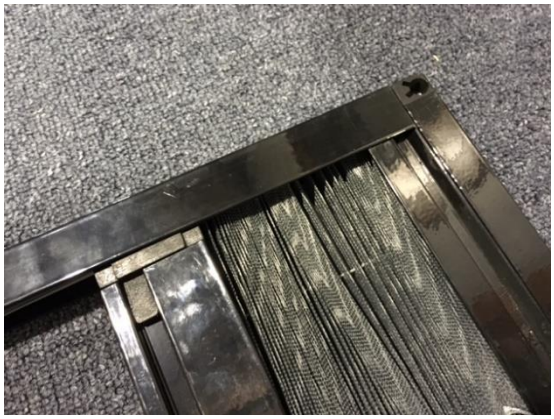

Top track attached.

Fully assembled screen, ready to install. Carefully Lift into place against door.

The top screws into place as pictured. The bottom Track can be secured to the floor or simply attached to the door frame using double sided tape.