Simply DOORS & WINDOWS

INSTALLATION ***INSTRUCTIONS***

4 Panel Bi Fold French Door

Instructions can be used for french doors, bi fold French windows and bi fold french doors

HARDWARE & PARTS LIST

- Lock Body (1)
- Lock Pulls & Screws (2)
- Lock Core, Screws & Keys (1)
- Lock Receiver Plate (1)
- Large Hinge Cover (16)
- Small Hinge Cover (16)
- Plastic Washers (16)
- HInge Plugs (32)
- Screws for Frame Style (8)
- Deadbolt Receiver Plates (6)
- Screws for Receiver Plates (12)
- Jar of Screws (1)
- Frame (4)
- Panels (4)

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au

FRAME ASSEMBLY

1. Unbox frame and hardware neatly.
2. Lay out frame on flat surface [Fig 1] with the outside facing up. Outside can be determined by hinge plates facing upwards.
3. Screw each corner of the frame together with the screws provided. [Fig 2-5]
4. Add relevant reveals (not supplied) to fins [Fig 6]. Please note, this step is optional and at the discretion of the installer and buyer.

Frame edge without fin is bottom sill

[Fig 1]

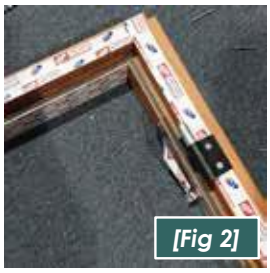
[Fig 2]

[Fig 3]

[Fig 4]

[Fig 5]

[Fig 6]

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au

FRAME INSTALLATION

1. Put frame into opening and make sure it is level, plumb and in wind. [Fig 7]
2. Fix frame to opening, making sure to solid pack behind each fixing. [Fig 8-9]

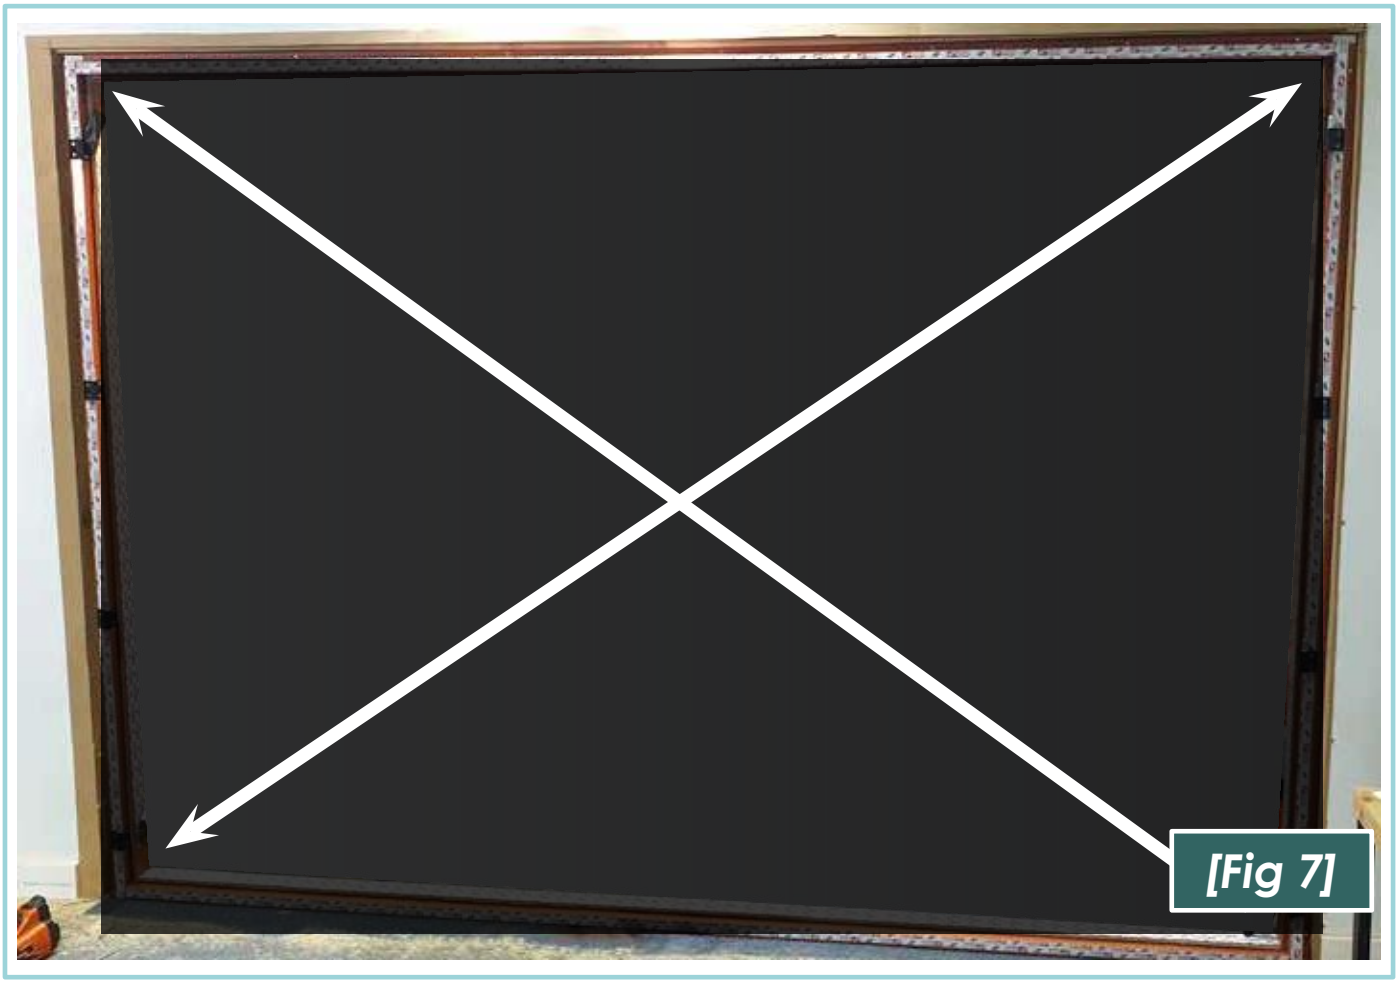
[Fig 7]

[Fig 8]

[Fig 9]

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au

PANEL INSTALLATION

1. Add washers to all pre assembled hinge pins [Fig 10]
2. Insert outer doors onto frame hinge pins [Fig 11-12]
3. Insert inner doors onto outer door hinge pins [13-14]
4. Close all doors and check alignment - adjust if needed

Panels are numbered

[Fig 10]

[Fig 11]

[Fig 12]

[Fig 13]

[Fig 14]

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au

LOCK INSTALLATION

1. Extend deadbolt and mark edges on frame [Fig. 15]
2. Align central hole with deadbolt marks and screw in (Plate must be in the centre of the rebate). Same process for both top and bottom receiver plates. [Fig. 16-17]
3. Insert lock body and align with outside holes. [Fig. 18-19]
4. Pre Drill for top and bottom fixings on. [Fig. 20]
5. Insert lock core into the lock body through the frame and screw in place. [Fig. 21]
6. Insert bolt above lock core [Fig. 22].
7. Screw receiving sleeves to inside of handle plate [Fig. 23-24]
8. Slide handles onto bolt and screw in place [Fig. 25].
9. Insert white striker plate box and striker plate into receiving door making sure it aligns with the tongue and deadlock.[Fig. 26]

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au

FINISHINGS

1. Remove plastic wrap (neatly cut around hinges with a sharp blade first) [Fig. 27].
2. Slide small hinge covers onto the frame hinges and add hinge plugs [Fig. 28].
3. Slide large hinge covers to the rest of the hinges and add hinge plugs [Fig. 29]

[Fig 27]

[Fig 28]

[Fig 29]

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au

Please Note:

All products must be installed by a licensed installer. Terms and conditions available on our website at www.simplydoorsandwindows.com.au